


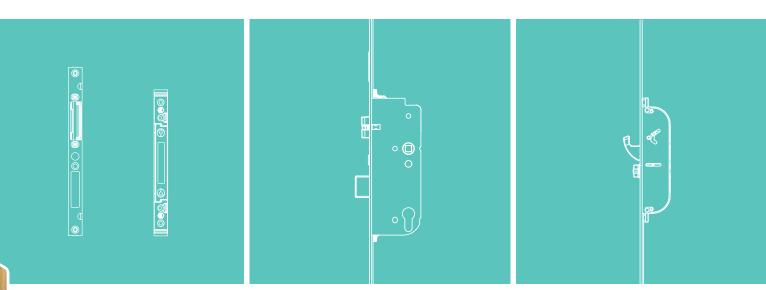

EXCLUSIVELY FOR CERTIFIED SPECIALISTS!

MACO PROTECT

DOOR LOCKS



ASSEMBLY INSTRUCTIONS

A-TS Automatic door lock



M119317

Table of contents

| Important Information | 4 - 10 |
|---|---------|
| Introduction | 4 |
| Informative note, Key | 5 |
| Intended use | 6 |
| Improper use | 6 - 9 |
| Use of transportation protection devices | 10 |
| Maintenance | 11 |
| Latch adjustment | 12 |
| Installation Instructions | 13 - 16 |
| Set lock for day release function (assembler) | 13 |
| Day release element assembly on the lock (assembler) | 14 |
| Assemble MACO day release opener on striker plate (assembler) | 15 |
| Day Release operating instructions (end-customer) | 16 |
| Door constructions | 17 - 18 |
| 4 mm rebate gap, 9 mm, 10 mm resp. 13 mm offset | 17 |
| 12 mm rebate gap, 9 mm, 10 mm resp. 13 mm offset | 18 |
| Drilling and routing patterns | 19 - 24 |
| Lock case and multifunction latch with hook lock | 19 |
| Latch and dead bolt striker plate 9/10 mm offset | 20 |
| Multifunction hook striker plate 9/10 mm offset | 21 |
| Latch and dead bolt striker plate 13 mm offset, 4 mm rebate gap | 22 |
| Latch and dead bolt striker plate 13 mm offset, 12 mm rebate gap | 23 |
| Multifunction hook striker plate 13 mm offset | 24 |
| Positioning of the striker plates | 25 - 40 |
| Latch and dead bolt striker plate 4 mm rebate gap, 9/10 mm resp. 13 mm offset | 25 |
| Multifunction hook striker plate 4 mm rehate gap 9/10 mm resp. 13 mm offset | 26 |



| Tec | :hnical data | 59 - 60 |
|-----|---|---------|
| | Cable transitions | 57 - 58 |
| | Routing patterns | 53 - 56 |
| | Plunger contact secureConnect Touchkey dLine | 52 |
| | Connection plan UPS (uninterruptible power supply) | 51 |
| | Circuit diagrams | 48 - 50 |
| | Somfy Smart lock controller | 47 |
| | Touchkey dLine | 46 |
| | Transponder Plus, Keypad and Touchkey | 45 |
| | Connection options BLE module for control via MACO SMARTPHONE APP | 44 |
| | Overview | 43 |
| Acc | cess solutions & interfaces | 43 - 58 |
| | Module with additional locking points | 42 |
| | Module without additional locking points | 41 |
| Ler | ngthening/shortening of the A-TS K+730 | 41 - 42 |
| | 2 multifunction latch with hooks, High K+980, double sash, 12 rebate gap, 13 offset | 40 |
| | 2 multifunction latch with hooks, High K+980, single sash, 12 rebate gap, 13 offset | 39 |
| | 2 multifunction latch with hooks, Standard K+730, double sash, 12 rebate gap, 13 offset | 38 |
| | 2 multifunction latch with hooks, Standard K+730, single sash, 12 rebate gap, 13 offset | 37 |
| | 2 multifunction latch with hooks, Low K+605, double sash, 12 rebate gap, 13 offset | 36 |
| | 2 multifunction latch with hooks, Low K+605, single sash, 12 rebate gap, 13 offset | 35 |
| | 2 multifunction latch with hooks, High K+980, single and double sash, 4 rebate gap, 13 offset | 34 |
| | 2 multifunction latch with hooks, Standard K+730, single and double sash, 4 rebate gap, 13 offs | et 33 |
| | 2 multifunction latch with hooks, Low K+605, single and double sash, 4 rebate gap, 13 offset | 32 |
| | 2 multifunction latch with hooks, High K+980, 4 resp. 12 rebate gap, 9/10 offset | 31 |
| | 2 multifunction latch with hooks, Standard K+730, 4 resp. 12 rebate gap, 9/10 offset | 30 |
| | 2 multifunction latch with hooks, Low K+605, 4 resp. 12 rebate gap, 9/10 offset | 29 |
| | Multifunction hook striker plate 12 mm rebate gap, 9/10 mm resp. 13 mm offset | 28 |
| | Latch and dead bolt striker plate 12 mm rebate gap, 9/10 mm resp. 13 mm offset | 27 |

Introduction

Read these instructions carefully before starting the A-TS assembly. Mount all hardware parts professionally as described in this manual and observe all safety instructions. Failure to follow these instructions cannot guarantee the proper functioning of the system. In the event of non-compliance, we assume no liability for damage to persons or material.

Match the required fixing material with the building structure and the corresponding load and expand on it if necessary. Any supplied fixing material only meets a part of the requirements.

Target audience for this guide

This documentation is intended exclusively for specialist companies and certified specialists. The work-steps described herein may only be carried out by certified specialists.

Retention of documents / briefing

Retain these assembly instructions for later use and maintenance.

Hand over the user manual (downloadable under maco.eu - Order No. 757585) to the end user and ensure they are briefed.

Installation and operation

Before installation - test doors and safety elements. The integrity and smoothness of the doors must be ensured.

All work (assembly, adjustment, etc.) must be carried out in a powered-down state.

Before installing the drive motor, the current temperature range must be checked for environment suitability.

To fix the hardware, use sufficiently long screws which must extend into the steel reinforcement when using PVC profiles.

Unless otherwise indicated, all measurements are made in millimetres.

All diagrams are only symbolic.

Printing errors, mistakes and changes are reserved.

Declaration of conformity can be found at:



EC declaration of incorporation Motor A-TS



Informative note



This indicates important additional information that is important for the error-free assembly of the product.

Key

| <u>*</u> | Backset DM | FFH | Sash rebate height |
|------------|----------------------|-----|-----------------------|
| ₹ 0 | Distance E | K+ | Case dimension top |
| □ | Handle height GM | K- | Case dimension bottom |
| | Profile Front Edge | | Important note |
| MF | Multi-function latch | | |
| EV | End piece | | |

5

Intended use

- > The A-TS is intended to be installed in vertical front doors, apartment doors and side doors made of PVC, timber, aluminium or steel and combinations thereof.
- > Mount all hardware parts professionally as described in this manual and observe all safety instructions.
- > In order to avoid errors in the electronics due to damaged cables, all milling/drilling in the area of the cable routing must be carefully deburred!
- > Installation and electrical installations must be carried out in accordance with these instructions. Incorrect wiring can lead to the destruction of the electronics.
- > When screwing in, make sure that the cables are not damaged by the fastening screws!
- > Before installation, ensure that all components are in perfect condition damaged or faulty components must not be used under any circumstances. Use A-TS only in a perfect condition.
- > Power to the power supply must be switched off before all work on the A-TS and the voltage-carrying components isperformed.


Improper use

- > The M-TS must NOT be used for escape or panic doors according to EN179 or EN1125.
- > The hardware parts described in this guide are made of stainless steel or galvanised passivated steel and sealed in accordance with DIN EN 12329. They must not be used in environments with aggressive, corrosive air content.
- > Do not use acid-curing sealants, as these can lead to corrosion of the hardware parts.


Improper assembly, misuse or unusual use, the use of system accessories not expressly approved by MACO, or modifications or repair work not expressly approved by MACO may lead to malfunctions and must be avoided. Any measures not expressly permitted by MACO shall result in the loss of all liability, warranty and, if necessary, separately agreed warranty claims.




Improper use

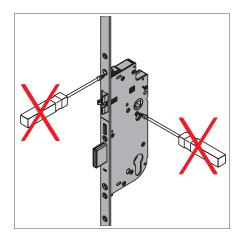


Never open the lock case!

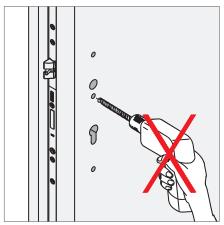


Drill all holes before installation of the lock.

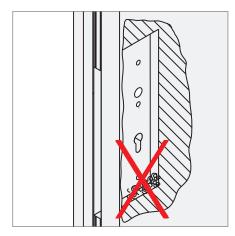


Remove swarf from the routing pockets!

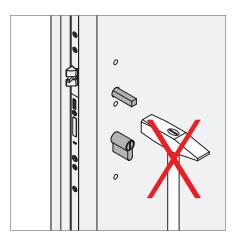

Do not force the handle pin through the lock nut!

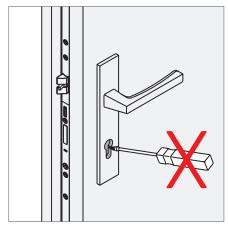


Only close the lock with the corresponding operating key!

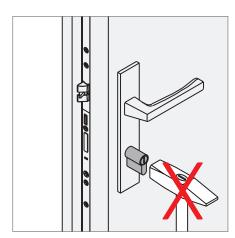


Do not use force during the cylinder assembly!

Improper use

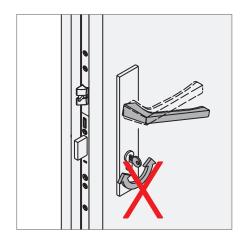


Do not simultaneously press the key and handle!

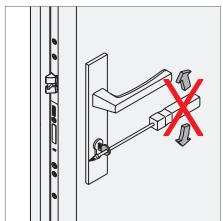


Do not turn the key using force!

The latch of the main lock must not rub against the striker plate – this also applies to multi-point locks without door acceleration, and all latches of the side locks. For this, use the adjustment option on the striker plates and door hinges. Adjustment of the holes in the striker plates is not permitted.

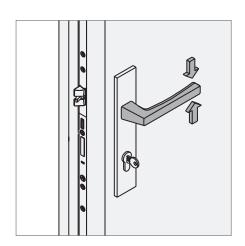

Only apply load to the handle in the normal direction! Apply a maximum force of 15 kg in the direction of actuation (on the handle).

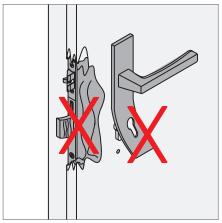

The multi-point lock must be replaced as soon as traces of use of force are visible!




Do not carry the door leaf with the handle!



Improper use



Do not paint or varnish over the shootbolt or latch!

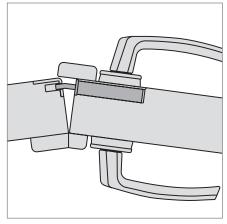

Double-sash doors must not be forced over the inactive leaf!




Do not lock the lock bar when the door is open!

Use of transportation protection devices


Simple transport protection devices, wedges or blocks ensure a safe transport of the entire door element. Remove only after installation.

A Transport protection device position

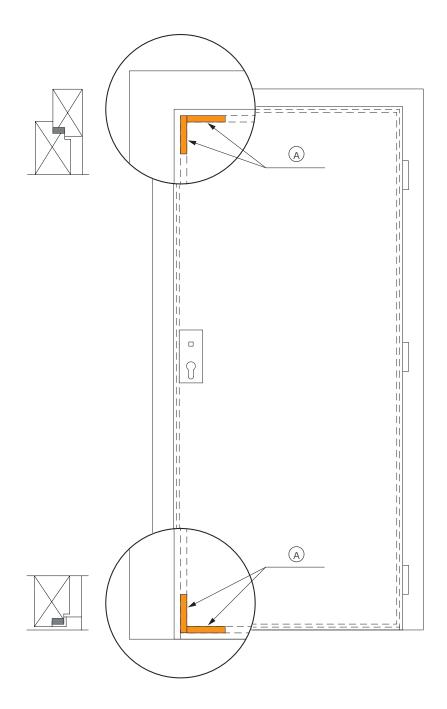




Maintenance

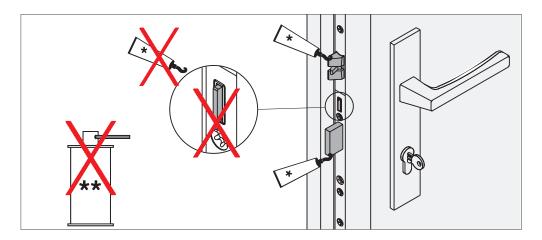

The door lock (lock case) is delivered with an intensive lubrication of high performance greases and must NOT be re-lubricated! Lubricate the latch and locking bolt 1x annually!

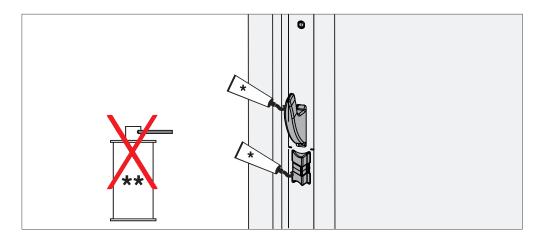


Lubricate the MF-HO locking element 1x annually!




Do not use any lubricating oils, rust remover, silicone sprays etc! Lubricate only with grease or technical petroleum jelly!

^{*} Spray grease (455341), ** Rust remover

Latch adjustment





a = Faceplate

b = Faceplate recess


c = Latch

d = Latch insert

e = Insert leg

Crank latch

Multi-function latch

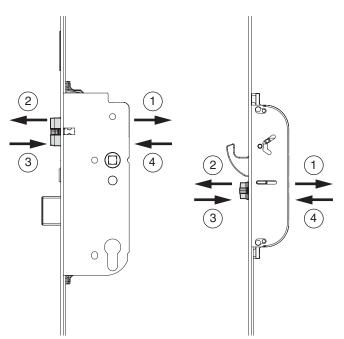


- ① Loosen the screw completely and press forward with a screwdriver!
- 2 Remove the latch!
- 3 Turn the latch over and place it on the faceplate (a) so that you can press the insert leg (e) of the latch insert (d) under the faceplate recess (b).
- 4 Only then press the latch in completely! Screw in (torque min. 1.5 Nm to max. 2 Nm)!



Perform functional check!



Set lock for day release function (assembler)

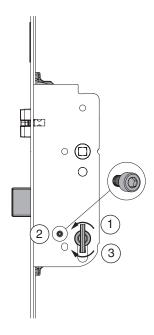

Set day release function

- 1 Lock
- (2.5 mm (2))
- 3 Unlock


Manufacture delivery state

- 1 Lock
- (2.5 mm (2.5 m
- 3 Unlock



If the day release function is set, the main latch is not actuated during motorised operation (door does not automatically jump open)!


Day release element assembly on the lock (assembler)

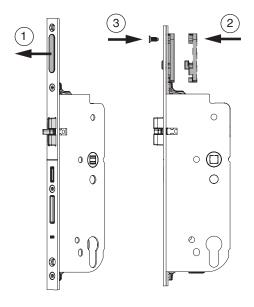

- (1) Remove the faceplate cover.
- 2 Position the day release element on the back of the faceplate (directly on the latch above the lock case).
- 3 Screw on the day release element with the attached TX20 M4x10 screw on the front of the faceplate!




MACO day release opener assembly on the striker plate (assembler)

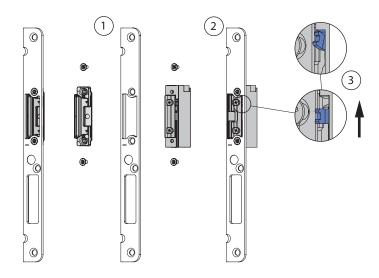


- (1) Remove the latch insert.
- (2) Assemble the MACO day release opener.
- 3 Activate the mechanical unlocking on the day release opener using the lever.

^{*} The mechanical unlocking can remain active as the day release is controlled via the day release actuator on the lock (see "Day Release" operating instructions p.16).

Day Release operating instructions (end-customer)

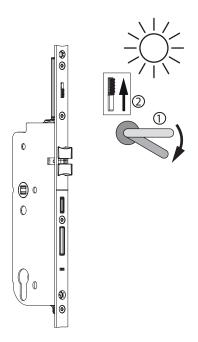

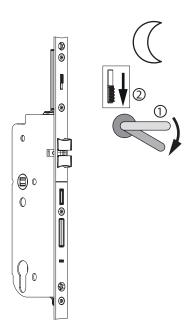

Activate day release

- 1) Press the handle so that the locking element and the multi-function latch are pulled in!
- 2 Push the day release actuator upwards, release the handle!

Deactivate day release

- 1) Press the handle so that the locking element and the multi-function latch are pulled in!
- 2 Push the day release actuator downwards!


The A-TS basic function, automatic locking, is again active!




Door constructions

4 mm rebate gap


9 mm offset

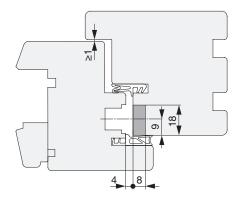

10 mm offset

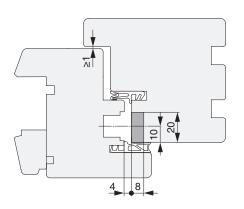

13 mm offset

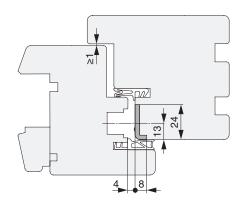




A rebate gap of 2 - 6 mm must be kept in the installed state!


Door constructions

12 mm rebate gap


9 mm offset

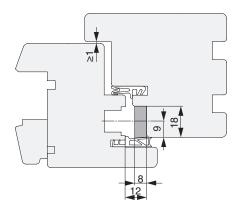

10 mm offset

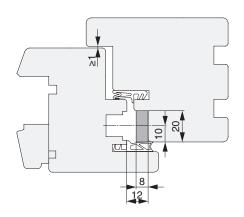

13 mm offset

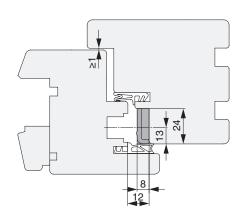




A rebate gap of 10 - 14 mm must be kept in the installed state!





Lock case and multifunction latch with hook lock

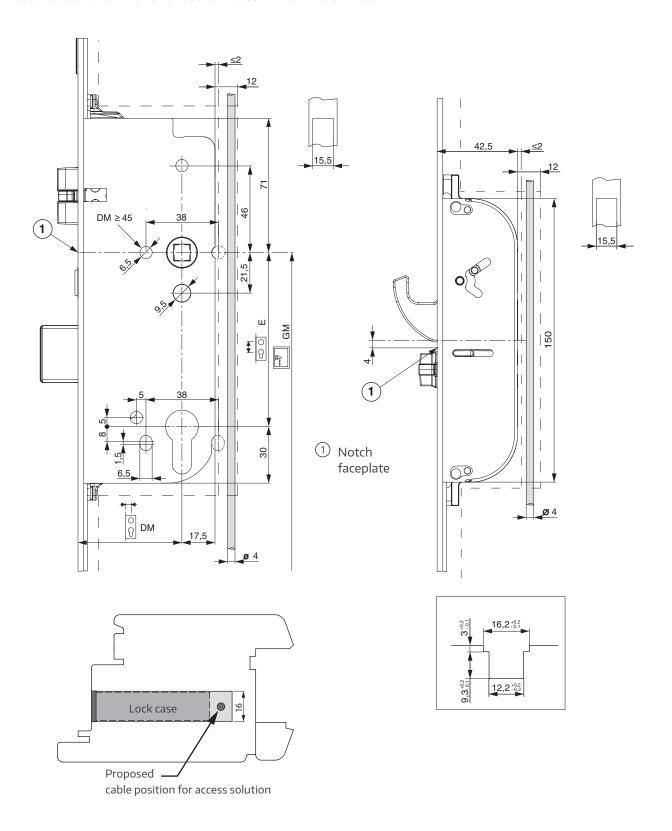


Latch and dead bolt striker plate 9/10 mm offset

4 mm rebate gap



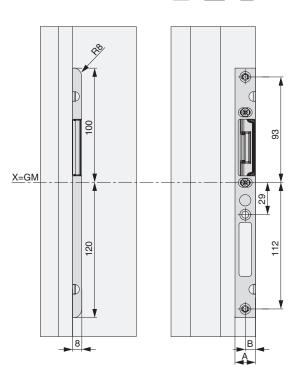


12 mm rebate gap

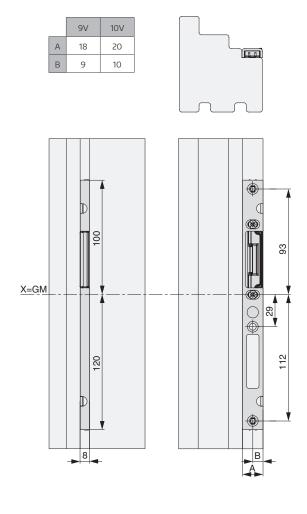





Multifunction hook striker plate 9/10 mm offset

4 mm rebate gap




| | 9V | 10V |
|---|----|-----|
| А | 18 | 20 |
| В | 9 | 10 |
| Е | 3 | 4 |




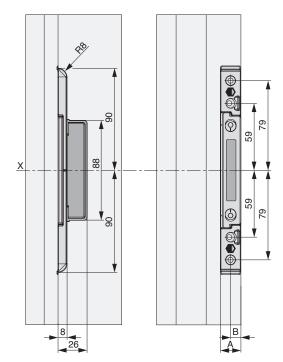


12 mm rebate gap




| | 9V | 10V |
|---|----|-----|
| А | 18 | 20 |
| В | 9 | 10 |
| Е | 3 | 4 |



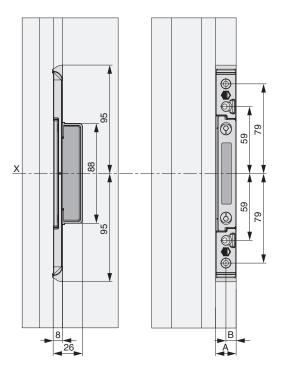


Latch and dead bolt striker plate 13 mm offset, 4 mm rebate gap

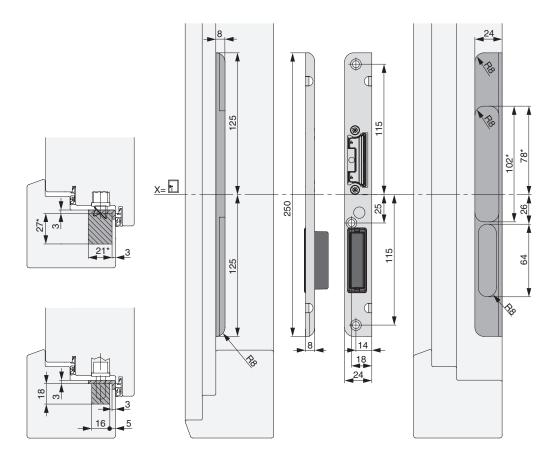

^{*}Routing pattern E-Opener




Latch and dead bolt striker plate 13 mm offset, 12 mm rebate gap

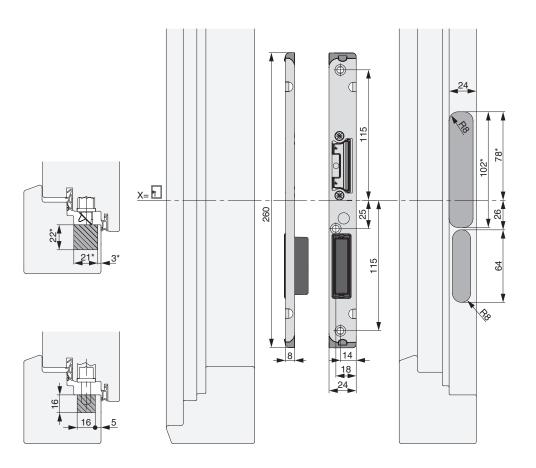


^{*}Routing pattern E-Opener

Multifunction hook striker plate 13 mm offset

4 mm rebate gap

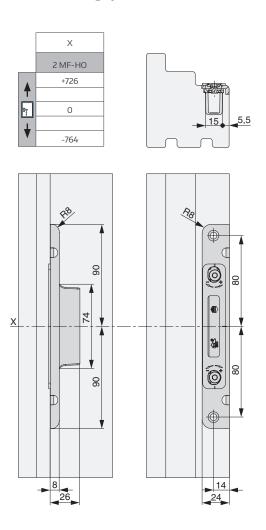


12 mm rebate gap

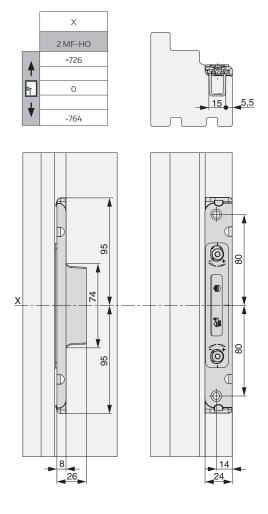




Latch and dead bolt striker plate

4 mm rebate gap, 9/10 mm offset

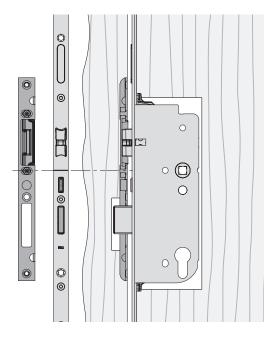

4 mm rebate gap, 13 mm offset

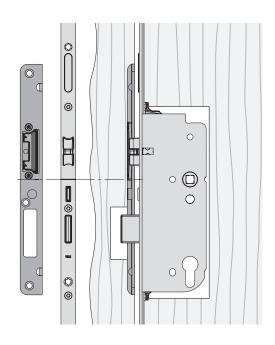

Gasket compression adjustment:

+/- 2 mm with latch and dead bolt striker plate

Positioning of notch faceplate = notch strike plate

Gasket compression adjustment:


+/- 2 mm with latch and dead bolt striker plate




A rebate gap of 2 - 6 mm must be kept in the installed state!

Multifunction hook striker plate

4 mm rebate gap, 9/10 mm offset

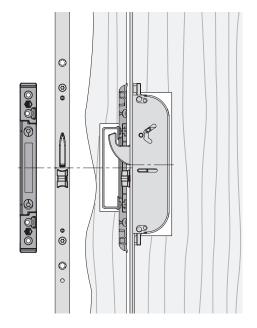

4 mm rebate gap, 13 mm offset

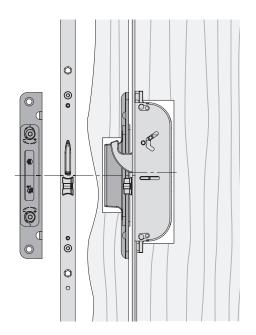

Gasket compression adjustment:

+/- 1 mm with MF-HO striker plate

Positioning of notch faceplate = notch strike plate

Gasket compression adjustment:

+/- 1.5 mm with MF-HO striker plate




A rebate gap of 2 - 6 mm must be kept in the installed state!




Latch and dead bolt striker plate

12 mm rebate gap, 9/10 mm offset

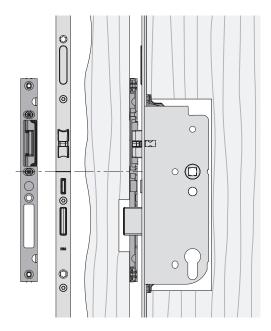

12 mm rebate gap, 13 mm offset

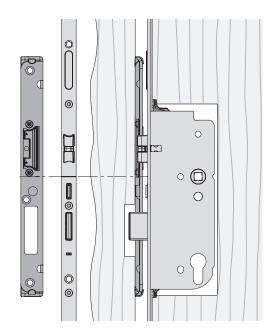

Gasket compression adjustment:

+/- 2 mm with latch and dead bolt striker plate

Positioning of notch faceplate = notch strike plate

Gasket compression adjustment:


+/- 2 mm with latch and dead bolt striker plate




A rebate gap of 10 - 14 mm must be kept in the installed state!

Multifunction hook striker plate

12 mm rebate gap, 9/10 mm offset

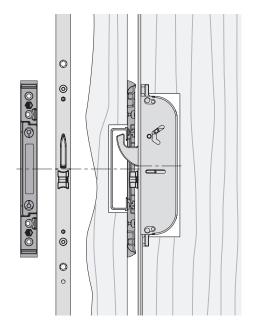

12 mm rebate gap, 13 mm offset

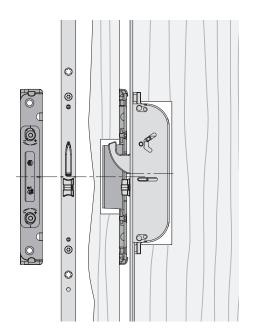

Gasket compression adjustment:

+/- 1 mm with MF-HO striker plate

Positioning of notch faceplate = notch strike plate

Gasket compression adjustment:

+/- 1.5 mm with MF-HO striker plate




A rebate gap of 10 - 14 mm must be kept in the installed state!




2 multifunction latch with hooks, Low K+605

4 mm rebate gap, 9/10 mm offset

- 1 Single striker plate
- ² Lock

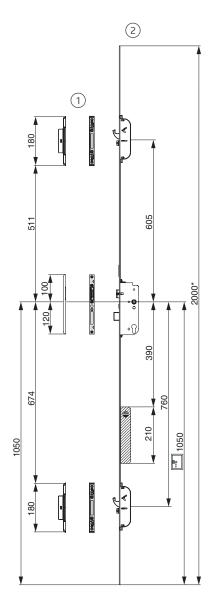

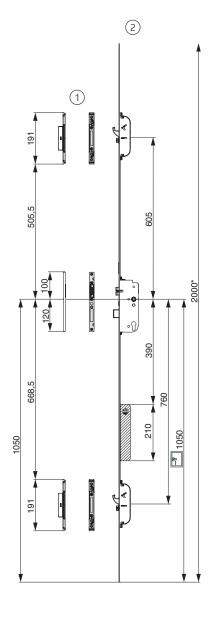


Motor for motorised opening


^{*} Use faceplate strip cover for higher SRH!

2 multifunction latch with hooks, Standard K+730


4 mm rebate gap, 9/10 mm offset

- 1 Single striker plate
- 2 Lock

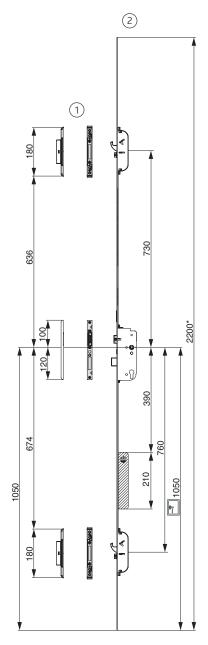



^{*} Use faceplate strip cover for higher SRH!

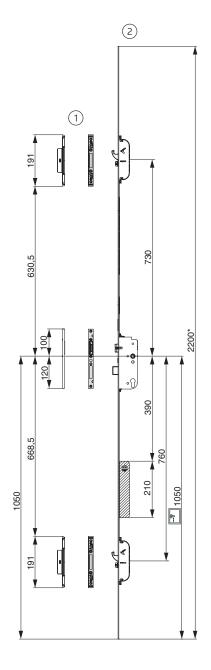





2 multifunction latch with hooks, High K+980

4 mm rebate gap, 9/10 mm offset

1 Single striker plate2 Lock

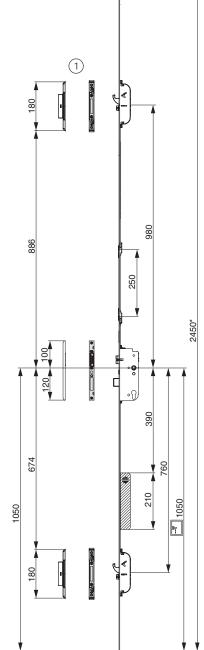

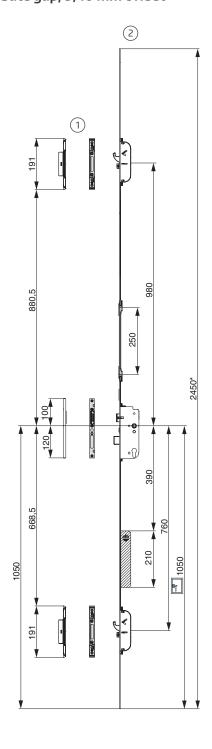


Motor for motorised opening

^{*} Use faceplate strip cover for higher SRH!

2 multifunction latch with hooks, Low K+605, single and double sash

- 1 Single striker plate
- **②** Finger operated door shootbolt
- 3 Lock

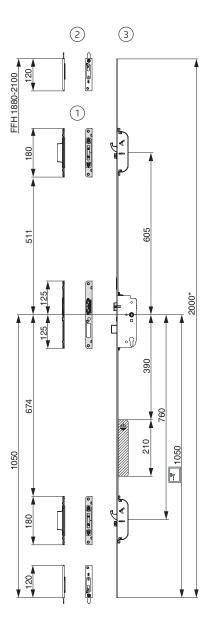


Motor for motorised opening

^{*} Use faceplate strip cover for higher SRH!



2 multifunction latch with hooks, Standard K+730, single and double sash

- 1 Single striker plate
- **②** Finger operated door shootbolt
- 3 Lock

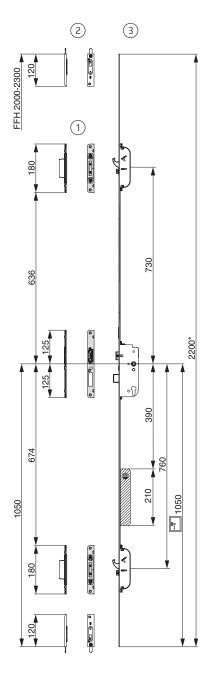


Motor for motorised opening

^{*} Use faceplate strip cover for higher SRH!

2 multifunction latch with hooks, High K+980, single and double sash

- 1 Single striker plate
- (2) Finger operated door shootbolt
- 3 Lock

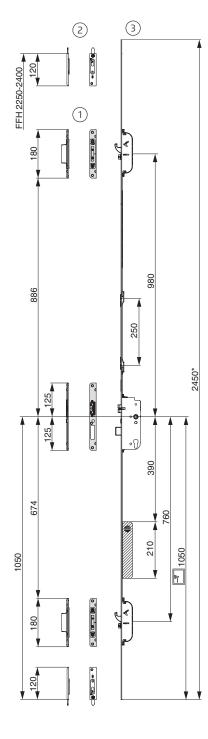


Motor for motorised opening


^{*} Use faceplate strip cover for higher SRH!



2 multifunction latch with hooks, Low K+605, single sash

- 1 Single striker plate
- 2 Single piece door striker
- 3 Lock

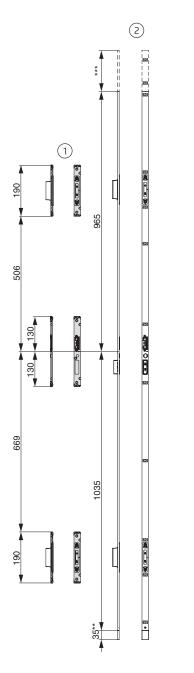



- Motor for motorised opening
 - * Use faceplate strip cover for higher SRH!
- ** Pluggable end for adaptation to threshold.
- *** for higher SRH use the striker plate extension Art. 102852!


2 multifunction latch with hooks, Low K+605, double sash

12 mm rebate gap, 13 mm offset

1) French casement drive gear

② Finger operated door shootbolt

3 Lock

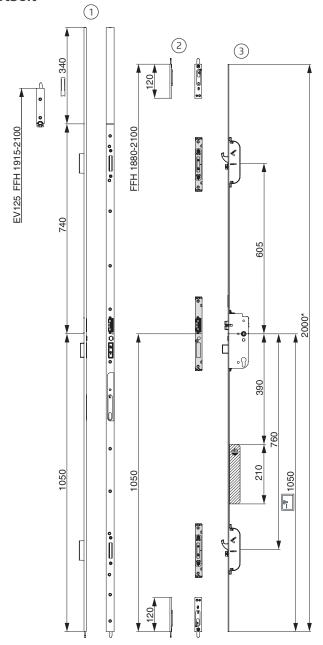

Motor for motorised opening


^{*} Use faceplate strip cover for higher SRH!




2 multifunction latch with hooks, Standard K+730, single sash

12 mm rebate gap, 13 mm offset

- 1 Single striker plate
- **②** Single piece door striker
- 3 Lock

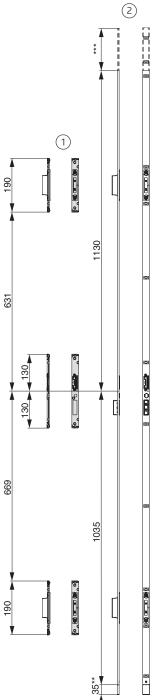




- Motor for motorised opening
 - * Use faceplate strip cover for higher SRH!
- ** Pluggable end for adaptation to threshold.
- *** for higher SRH use the striker plate extension Art. 102852!

2 multifunction latch with hooks, Standard K+730, double sash

12 mm rebate gap, 13 mm offset

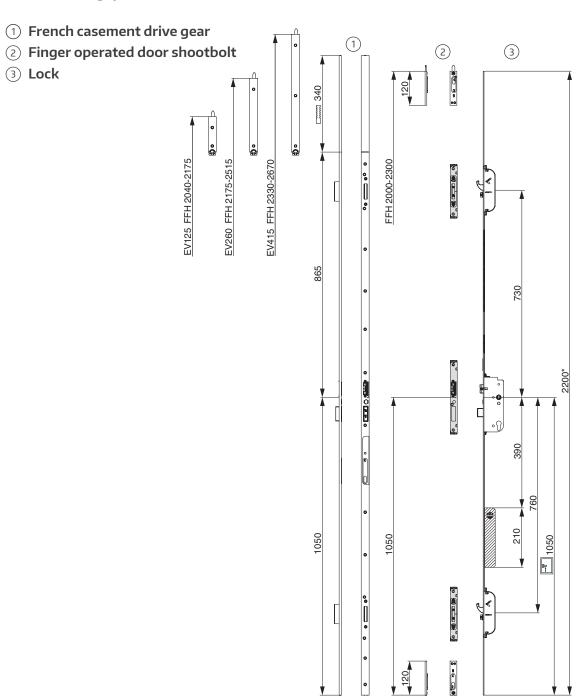

Motor for motorised opening


^{*} Use faceplate strip cover for higher SRH!




2 multifunction latch with hooks, High K+980, single sash

12 mm rebate gap, 13 mm offset


- 1 Single striker plate
- **2** Single piece door striker
- 3 Lock

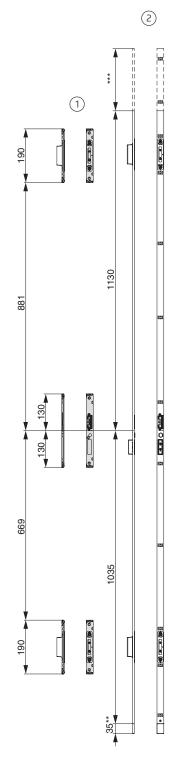



- Motor for motorised opening
 - * Use faceplate strip cover for higher SRH!
- ** Pluggable end for adaptation to threshold.
- *** for higher SRH use the striker plate extension Art. 102852!

2 multifunction latch with hooks, High K+980, double sash

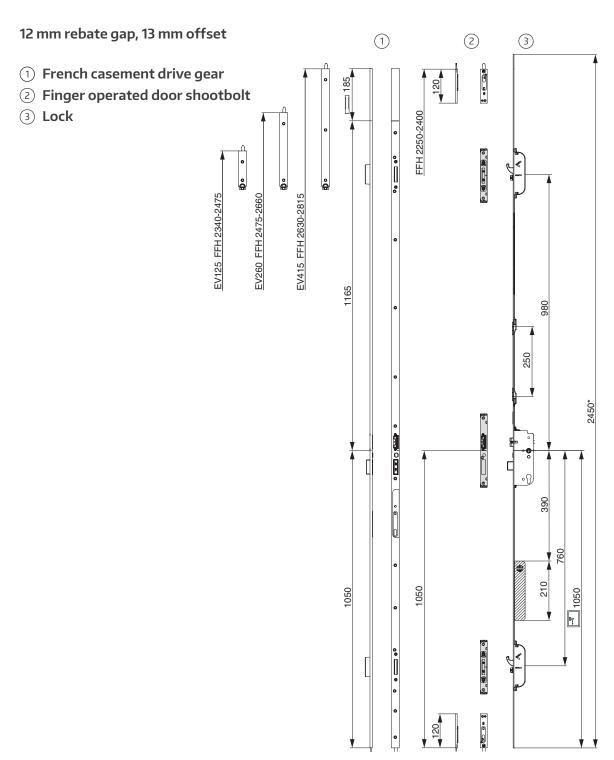

Motor for motorised opening

^{*} Use faceplate strip cover for higher SRH!




Lengthening/shortening of the A-TS K+730

Module without additional locking point



- ⇒ Only possible with A-TS K+730 module!

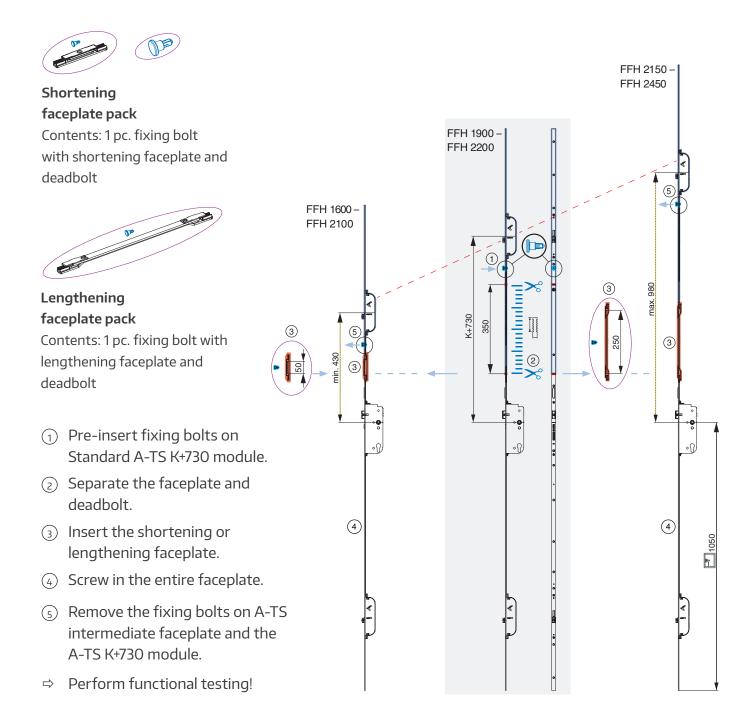


Extension of the A-TS K+730

Module with additional locking point




- ⇒ Only possible with A-TS K+730 module!
- ⇒ When using the A-TS intermediate faceplate module, the standard eurogroove must be used!

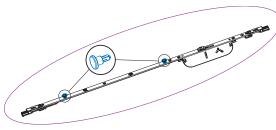

The A-TS intermediate faceplate module is delivered with two pre-inserted fixing pins!

- Remove 1 of the fixing pins from the intermediate faceplate.
- Pre-insert fixing bolts on Standard A-TS K+730 module.
- 3 Separate the faceplate and deadbolt.
- Insert the A-TS intermediate faceplate with the pre-fitted fixing pins.
- Screw in the entire faceplate.
- 6 Remove the fixing bolts on the A-TS intermediate faceplate and on the A-TS K+730 module.
- ⇒ Perform functional testing!

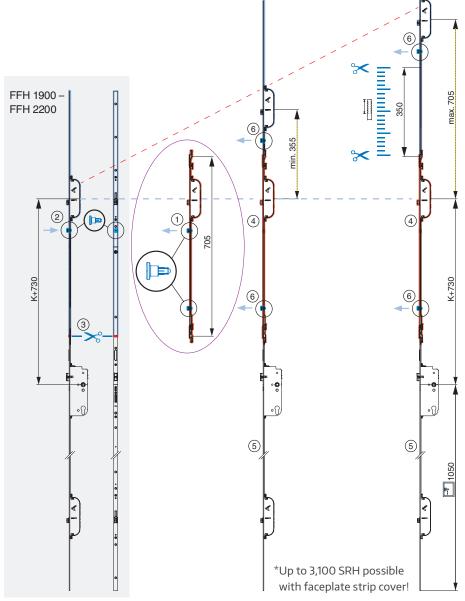

FFH 2250 - FFH 2900*



VdS certification pertains only to the mechanical part of the multi-point lock.




Access solutions and interfaces listed below are not included in the VdS certification!


Access solutions & interfaces

Overview

- 3-latch door lock with opening motor
 High security thanks to self-locking of steel hooks and locking latch.
- 2 Tamper-proof
 Control unit protected from unauthorised access.
- Maximum comfort thanks to motorised release.
- 4 Plug & Play
 Simple, non-mistakable
 plug-in connection.
- (5) **EASY mounting and de-mounting** of the door thanks to plug-in cable transition.
- 6) openDoor Touchkey dLine

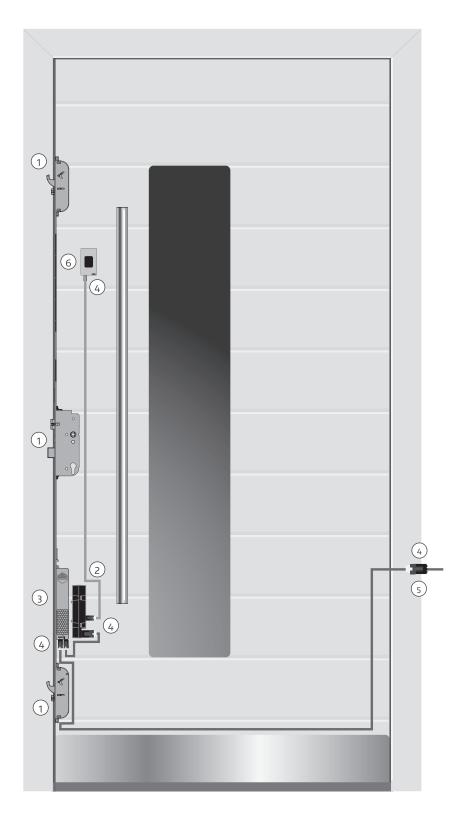


Connection options BLE module for control via MACO SMARTPHONE APP

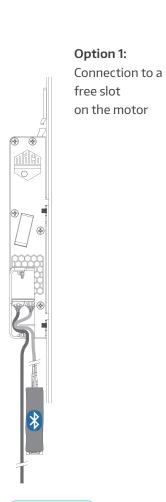



Option 2: Connection between openDoor access control and motor



Option 3: Connection between cable transition (6 m / 10 m) and motor







The INSTINCT App is available free of charge for iOS and Android.
It is easy to install, activate with the

admin card QR code and off you go.

No complicated web-based programming is required.











Transponder Plus, Keypad and Touchkey

Cable installation - cable transition 6 m / 10 m external installation length / 1.5 m, 2.5 m, 4.5 m in the door leaf

Plug & Play connection motor to:

- (A) Cable transition
- Access Solution
- O Power supply**
- **D** Loop for tension release


Plug & Play connector / cable installation

- 1) Brown: motor operating voltage minus -
- (2) White: motor operating voltage plus +

milling must be deburred!



Electrical connections (connection of power supply, connection cable 6 m and 10 m) may only be carried out by authorised personnel!

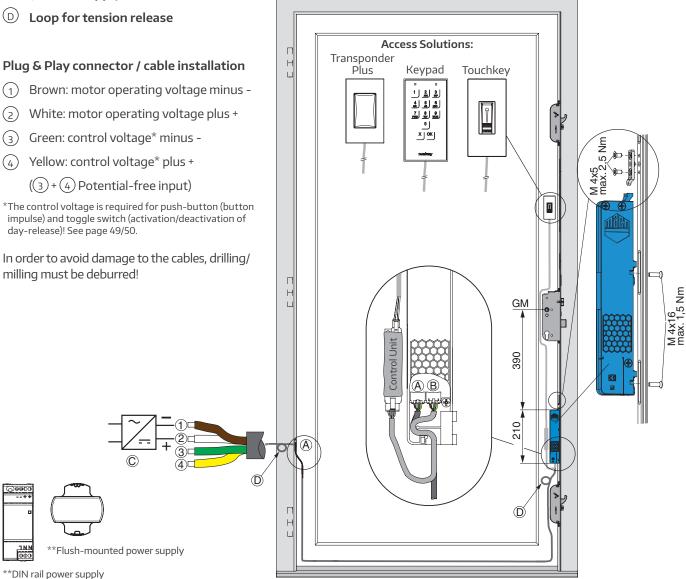

^{**} It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose.These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.

impulse) and toggle switch (activation/deactivation of

Touchkey dLine

Cable installation - cable transition 6 m / 10 m external installation length / 1.5 m, 2.5 m, 4.5 m in the door leaf


Plug & Play connection motor to:

- (A) Cable transition
- **B** Access Solution
- © ¶ Power supply**
- **D** Loop for tension release

- 1) Brown: motor operating voltage minus -
- (2) White: motor operating voltage plus +
- (3) Green: control voltage* minus -
- *The control voltage is required for push-button (button impulse) and toggle switch (activation/deactivation of



Electrical connections (connection of power supply, connection cable 6 m and 10 m) may only be carried out by authorised personnel!

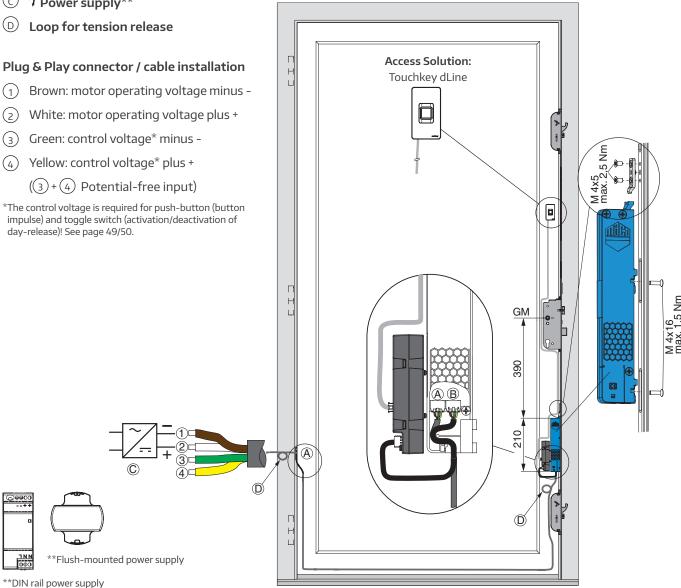

^{**}It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose. These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.



Somfy Smart lock controller

Cable installation - cable transition 10 m external installation length / 2,5 m in the door leaf

Plug & Play connection motor to:


(A) Cable transition

**DIN rail power supply

- B / Power supply**
- **©** Loop for tension release




Electrical connections (connection of power supply, connection cable 6 m and 10 m) may only be carried out by authorised personnel!

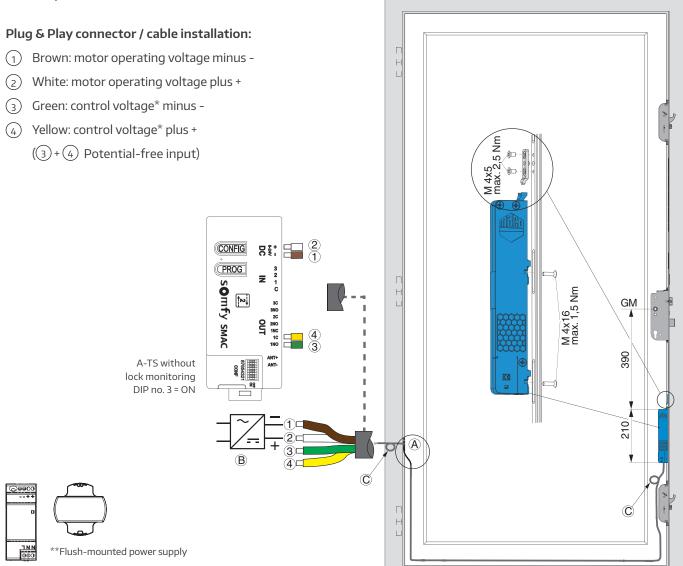

^{**}It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose. These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.

Circuit diagram frame-side

Cable installation - cable transition 6 m / 10 m external installation length / 1.5 m, 2.5 m, 4.5 m in the door leaf

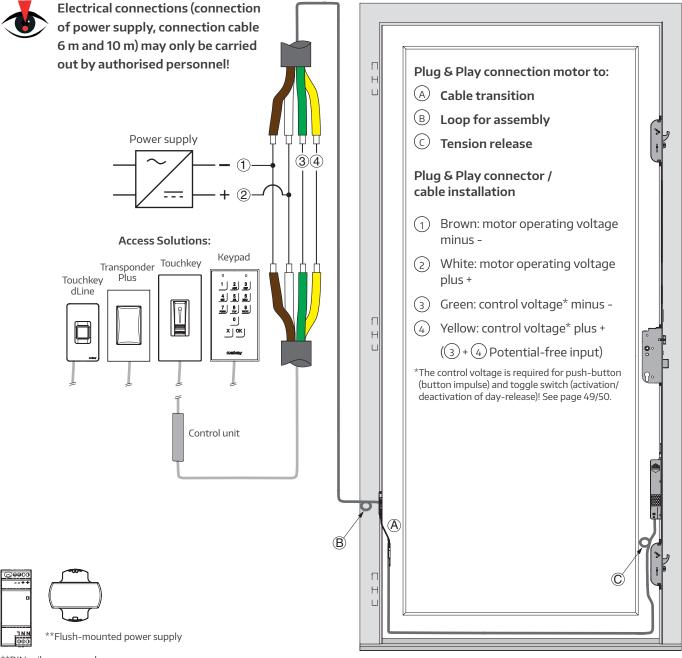


^{**}DIN rail power supply

^{**}It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose. These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.



Circuit diagram button impulse


Cable installation - cable transition 6 m / 10 m external installation length / 1.5 m, 2.5 m, 4.5 m in the door leaf

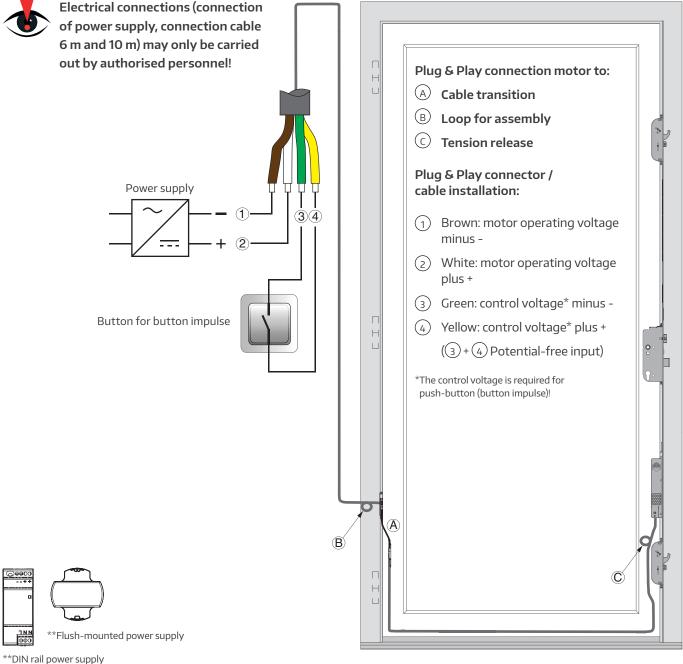

^{**}It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose. These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.

Circuit diagram toggle switch (motorised day release)

Cable installation - cable transition 6 m / 10 m external installation length / $1.5 \, m$, $2.5 \, m$, $4.5 \, m$ in the door leaf

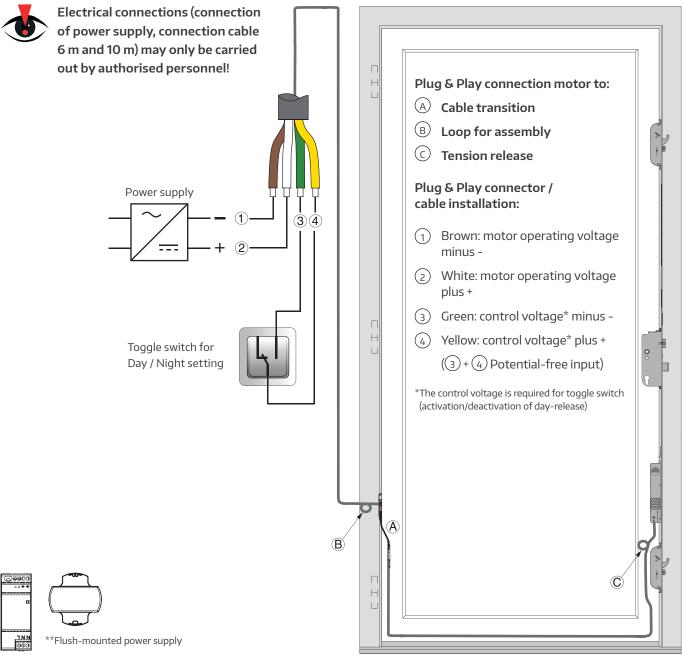

^{**}DIN rail power supply


^{**}It is recommended to use the A-TS for motorised opening only with the power supply units that have been tested and approved for this purpose. These are designed for an input voltage of 220-240 V / 50-60 Hz and provide an output voltage of 24 V DC 1A with dynamic overcurrent 3A for 500 ms/ 7A for 100 ms. Alternatively, third-party products must have an output voltage of 12 - 24 V DC with min. 1.5A.



Connection plan UPS (uninterruptible power supply)

The use of the MACO UPS (Art. No. 480987) is recommended by MACO and bridges common, short-term power outages without functional restrictions. The bridging time depends on the actual system configuration. Should the unlikely event occur that a power failure occurs during a motorised opening or closing process, the mechanics may block. With the UPS, the lock moves to the desired position. Without a UPS, the M-TS can be operated manually by means of a key or handle (from the inside) in the event of a power failure in the closed or open state.


IMPORTANT! For UPS operation, at least one additional user (BLE module, access control,...) must be connected. Otherwise, the UPS will fall into standby mode and will NOT be active in the event of a power failure.

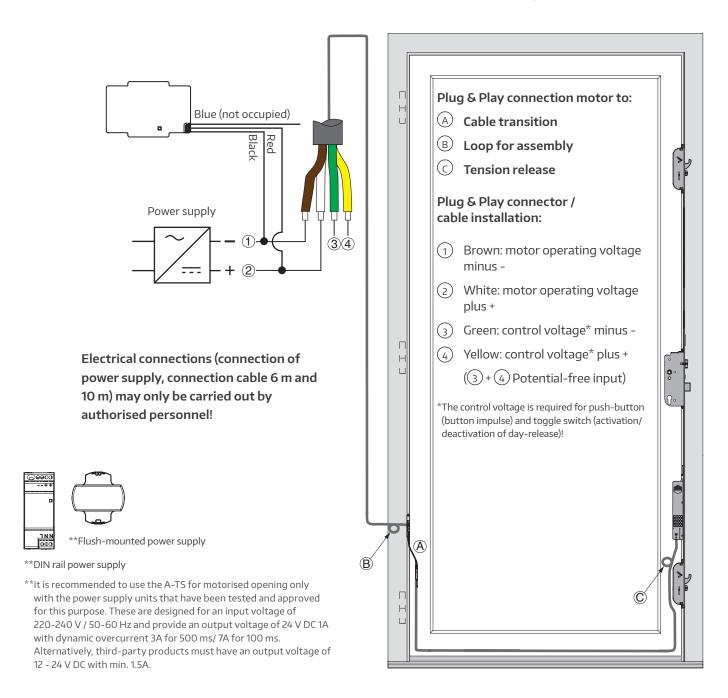

Plunger contact secureConnect Touchkey dLine


Plug & Play connection motor to:

- Adapter cable for plunger contact to dLine
- **B** Adapter cable for plunger contact to motor
- © dLine access control

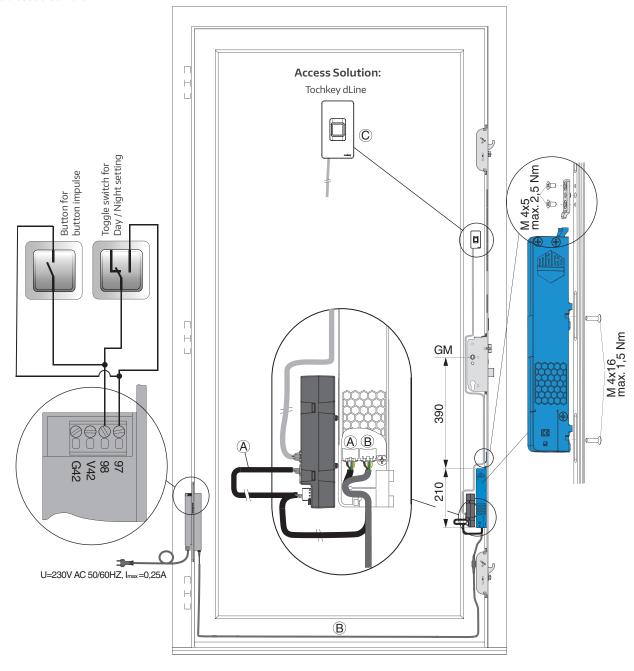




Routing patterns Transponder plus

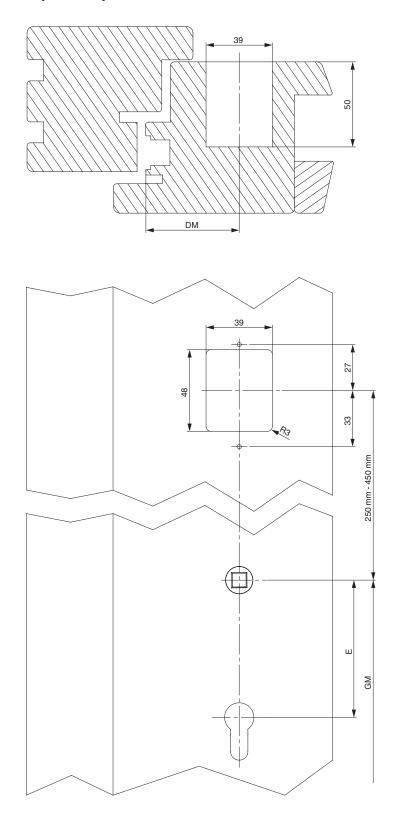


Routing patterns Keypad / Touchkey

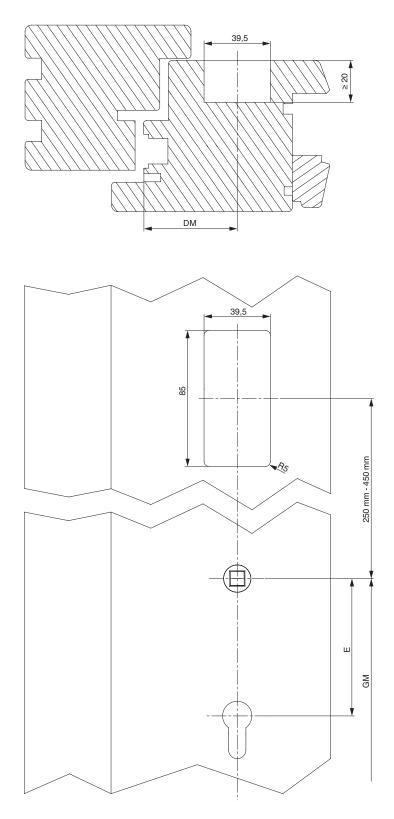




Routing patterns Touchkey dLine

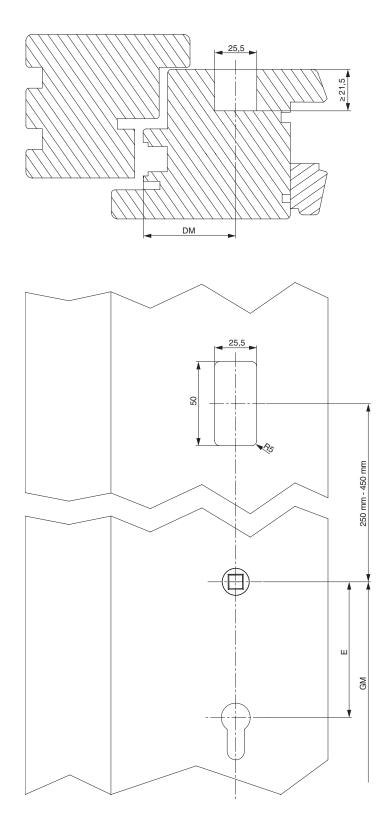

Routing patterns including mounting plate and motor assembly

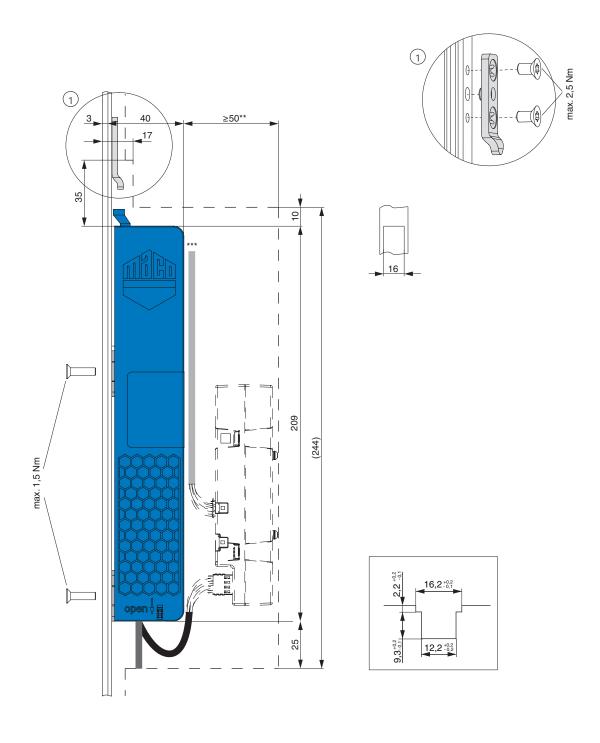


^{*} dLine controller for Access Solutions


^{**} Cable channel for Comfort Solution


^{***} Cable for openDoor Access Solutions




Cable transition for opening angle ≤110°, 12 gap

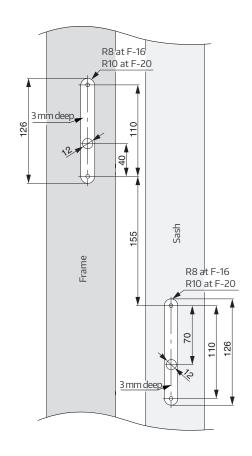

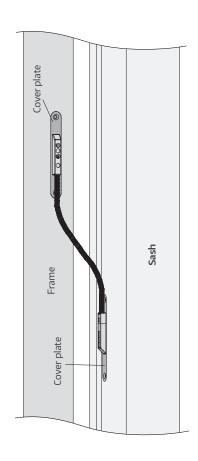

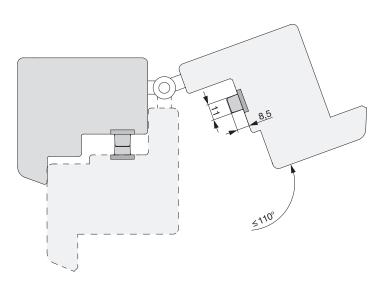

Cable transition for opening angle ≤180°, 4 gap, 12 gap

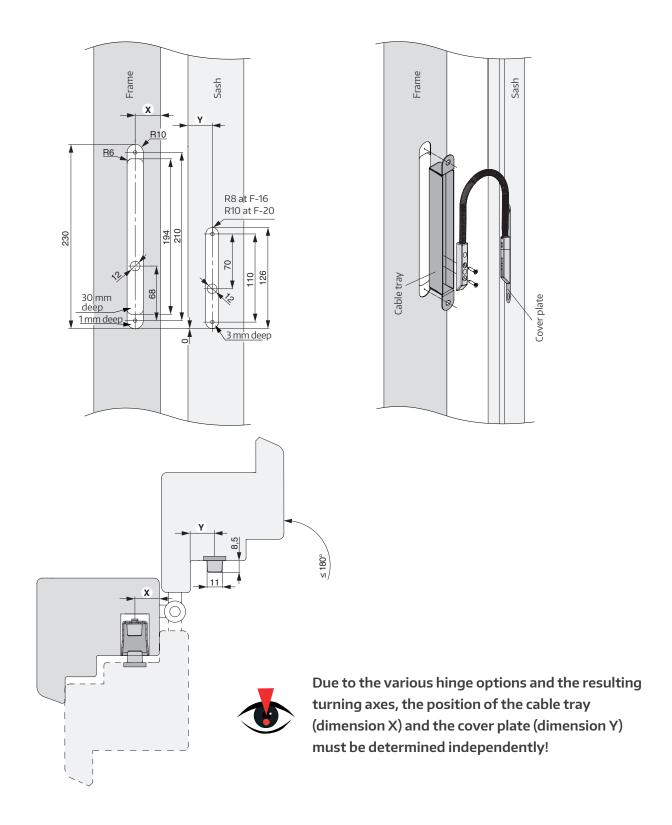



Technical data A-TS Comfortmotor

| Net weight157 gRated voltage (SELV)12 24 V DC / 12 V ACStandby consumption14,2 mA at 24 V DC = 340,8 mWOperating temperature-10 +55 °CAir humidity20 80%, non-condensingStorage temperature-40 +85 °CUser groupsprivate users, e.g. lay people, childrenUsage environmentin covered and enclosed spacesApplication areaIndustrial sector: no Residential area, business/commercial area, small businesses: yesInputs1 potential-free contact (2 JST connectors)OutputsnoProtection typenot specifiedCertificateCEDuty cycleDC 50%Service life200,000 cyclesProtection classIII (SELV) | Casing dimensions (W x H x D) | 15,4 x 209 x 40,2 mm |
|---|-------------------------------|---|
| Standby consumption 14,2 mA at 24 V DC = 340,8 mW Operating temperature -10 +55 °C Air humidity 20 80%, non-condensing Storage temperature -40 +85 °C User groups private users, e.g. lay people, children Usage environment in covered and enclosed spaces Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Net weight | 157 g |
| Operating temperature Air humidity 20 80%, non-condensing Storage temperature -40 +85 °C User groups private users, e.g. lay people, children Usage environment in covered and enclosed spaces Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Rated voltage (SELV) | 12 24 V DC / 12 V AC |
| Air humidity Storage temperature -40 +85 °C User groups private users, e.g. lay people, children Usage environment Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Standby consumption | 14,2 mA at 24 V DC = 340,8 mW |
| Storage temperature -40 +85 °C User groups private users, e.g. lay people, children Usage environment in covered and enclosed spaces Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Operating temperature | -10 +55 °C |
| User groups private users, e.g. lay people, children Usage environment in covered and enclosed spaces Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Air humidity | 20 80%, non-condensing |
| Usage environment in covered and enclosed spaces Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Storage temperature | -40 +85 °C |
| Application area Industrial sector: no Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | User groups | private users, e.g. lay people, children |
| Residential area, business/commercial area, small businesses: yes Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Usage environment | in covered and enclosed spaces |
| Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Application area | Industrial sector: no |
| Inputs 1 potential-free contact (2 JST connectors) Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | | Residential area, business/commercial area, |
| Outputs no Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | | small businesses: yes |
| Protection type not specified Certificate CE Duty cycle DC 50% Service life 200,000 cycles | Inputs | 1 potential-free contact (2 JST connectors) |
| CertificateCEDuty cycleDC 50%Service life200,000 cycles | Outputs | no |
| Duty cycleDC 50%Service life200,000 cycles | Protection type | not specified |
| Service life 200,000 cycles | Certificate | CE |
| | Duty cycle | DC 50% |
| Protection class III (SELV) | Service life | 200,000 cycles |
| | Protection class | III (SELV) |

Technical data Bluetooth module for A-TS + M-TS

| Dimensions (W \times H \times D) | 8,3 x 88,6 x 21,2 mm |
|--------------------------------------|---|
| Net weight | 18 g |
| Cable length | approx. 300 mm |
| Frequency range | 2,40 GHz 2,48 GHz |
| Rated voltage (SELV) | 12 24 V DC |
| Rated current | 0,01 A |
| Standby consumption | approx. 0,11 W |
| Operating temperature | -10 +55 °C |
| Air humidity | ≤95%, non-condensing |
| Storage temperature | -25 +70 °C |
| User groups | private users, e.g. lay people, children |
| Usage environment | in covered and enclosed spaces |
| Application area | Industrial sector: no |
| | Residential area, business/commercial area, |
| | small businesses: yes |
| Inputs | - |
| Outputs | 1 potential-free output |
| Certificate | CE |

Technical data UPS (uninterruptible power supply)

see installation instructions and UPS module data sheet, order no. 759528


Technical data Power supply

see installation instructions and data sheet power supplies 480276 and 480277, order no. 759529



You want everything from a single source?

We provide you with complete solutions for sliding doors, windows and doors – for timber, PVC and aluminium. Experience our versatile system offer, comprehensive service included. Discover more of this on our website **www.maco.eu** or contact your MACO representative.

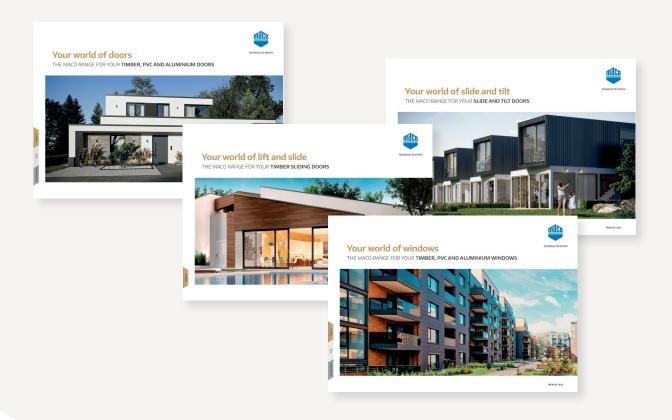



www.maco.eu/contact



TECHNOLOGY IN MOTION

