

Montagehinweise für Oberlichtschere


(Art.-Nr. 11026 und 101027)


Bestimmungsgemäße Verwendung:

Die Oberlichtscheren ermöglichen die Kippfunktion eines Kipp-Fensters. Sie dürfen nur zu diesem Zweck eingebaut und verwendet werden!

Wichtig: Die Oberlichtscheren ersetzen keine Fang- und Putzscheren!

Einbau und Einstellung der Oberlichtscheren darf nur durch Fachpersonal erfolgen!



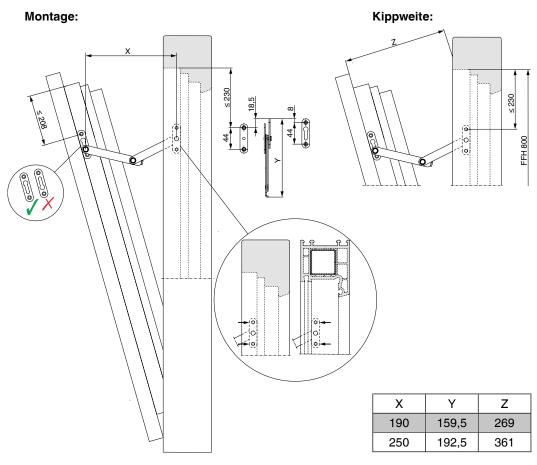

(A) Schrauben so lange wie möglich, mindestens \emptyset 4x45 mm. Bei Kunststoffprofilen muss in die Armierung verschraubt werden!

(B) Bei Profilen ohne Beschlagnut die Einhänglasche bündig einfräsen. Freistellung für den Führungszapfen vorsehen!





Assembly instructions for horizontal tilt stay

(Item no. 11026 and 101027)


Intended purpose:

The horizontal tilt stays provide the tilt windows with their tilt function. They are only permitted to be used and fitted for this purpose.

Important: The horizontal tilt stay do not replace a restrictor and cleaning stay!

The fitting and setting of the horizontal tilt stay must only be carried out by skilled personnel!








210 - 800

Installation: Tilt depth:

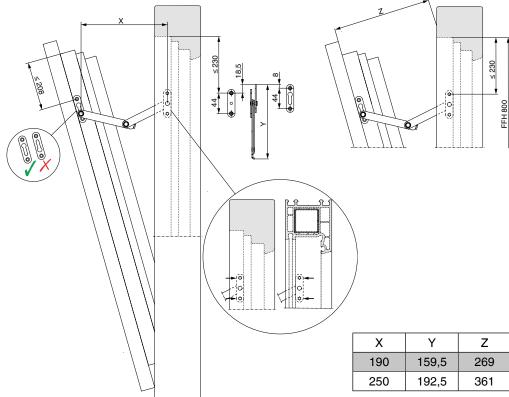

(A) Screws as long as possible, at least Ø 4x45 mm. In the case of PVC profiles, the threaded connection must go through the reinforcement.

(B) In the case of profiles without fitting groove, mill the attachment tab flush. Provide a recess for the guide pin.



www.maco.eu