




Beipackzettel jedem Artikel beifügen! (Download [www.maco.eu](http://www.maco.eu))



## MULTI-Vent Lüftungssteller

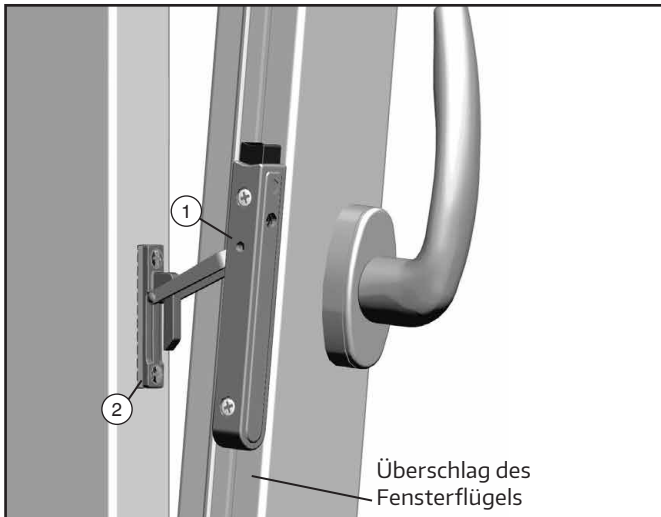


Bestell-Nr.: 12361 braun

Bestell-Nr.: 12360 weiss




**Gilt nicht als Kindersicherung!**

### Montage

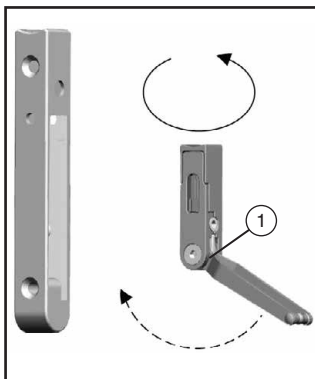

Der MULTI-Vent muss auf rechts bzw. links eingestellt werden, damit die Innensechskantschraube ① zur Einstellung der Bremswirkung erreichbar ist.


### Montage Holz:

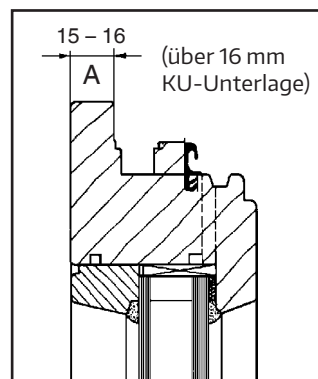

Wenn das **Maß A** (Überschlagshöhe) größer ist als 16 mm, muss die mitgelieferte KU-Unterlage ② unter den Verschlusshaken montiert werden.

Über 18 mm muss eine zweite Unterlage bestellt werden. (Best.-Nr. 42499)

### Montage Kunststoff:

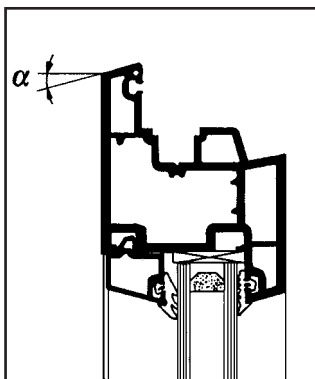

Für abgeschrägte Überschlänge ( $\alpha$ ) gibt es dazu passende KU-Unterlagen.

#### 5° Schräge

Best.-Nr. 42502 braun


Best.-Nr. 42509 weiß

#### 15° Schräge

Best.-Nr. 42513 braun

Best.-Nr. 42514 weiß

### Montage mit Bohrlehre

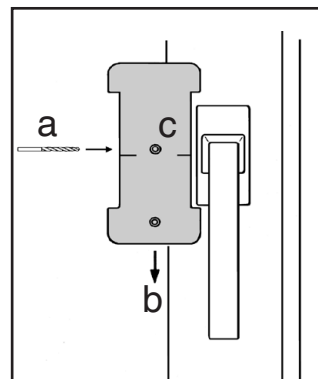

- Mit 3 mm Bohrer im Überschlag vorbohren.
- Lehre nach unten verschieben, bis die Zentrierstifte eingreifen.
- Fenster schließen und Löcher für Verschlusshaken vorbohren.

Best.-Nr. 42505



Dieses Print-Dokument wird laufend überarbeitet.  
Die aktuelle Version finden Sie unter <https://www.maco.eu/assets/49256>  
oder scannen Sie den QR-Code.

Erstellungsdatum: 01/1994 - geändert: 03/2015  
Best.-Nr. 49256


Alle Rechte und Änderungen vorbehalten.



Enclose instruction leaflet with each article! (Download [www.maco.eu](http://www.maco.eu))



## MULTI Vent tilt restrictor

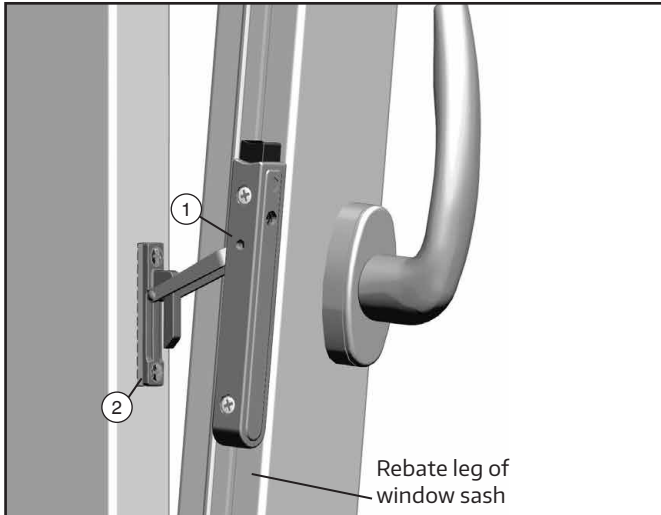


Order No.: 12361 brown

Order No.: 12360 white




**This cannot be used as a child safety lock.**

### Installation

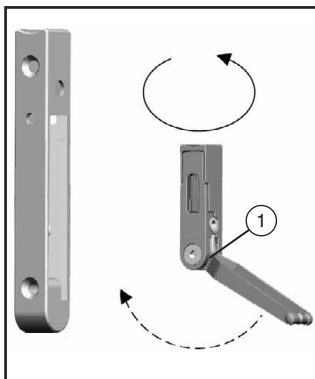

The MULTI Vent must be set to right or left so that Allen screw ① can be accessed to set the braking effect.


### Timber installation:

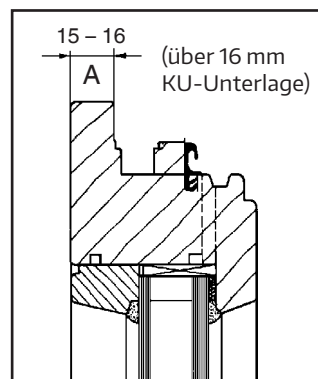

If **dimension A** (rebate height) is greater than 16 mm, the PVC packer supplied ② must be installed below the locking hook.

A second packer must be ordered over 18 mm. (Order No. 42499)

### Installation on PVC:

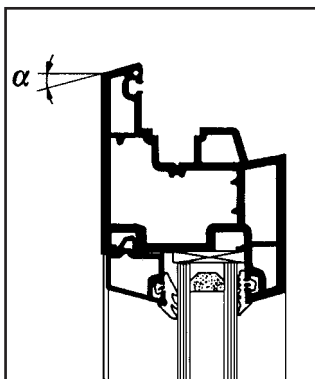

Matching PVC packers are available for pitched rebate legs ( $\alpha$ ).

**5° pitch**

Order no. 42502 brown


Order no. 42509 white

**15° pitch**

Order no. 42513 brown

Order no. 42514 white

### Installation with drilling jig

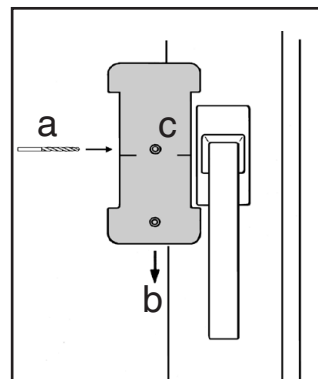

- Pre-drill the rebate leg with 3 mm drill.
- Move the jig down until the centering pins engage.
- Close the window and pre-drill the holes for the locking hooks.

Order no. 42505



This document is constantly being edited.  
The current version can be found at <https://www.maco.eu/assets/49256>  
or scan the QR code.

Created: 01/1994 - Changed: 03/2015  
Order No. 49256  
All rights and modifications reserved.