


MACO
MULTI



ACHTUNG! Bei Einzelentnahme muss der Beipackzettel dem Einzelteil hinzugefügt werden. Bei Bedarf können Sie den Beipackzettel von der MACO-Homepage (www.maco.eu) herunterladen!

MULTI-Vent Lüftungssteller

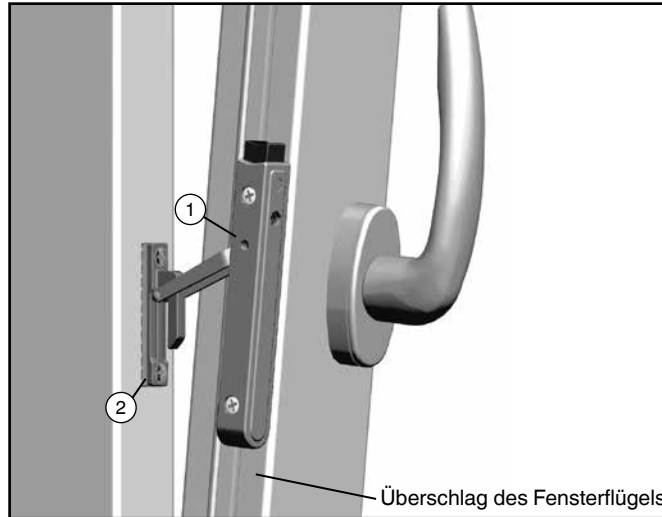


Bestell-Nr.: 12361 braun
Bestell-Nr.: 12360 weiss




**Gilt nicht als
Kindersicherung!**

Montage

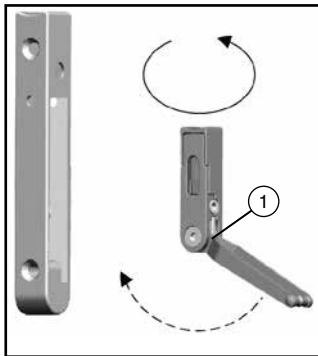

Der MULTI-Vent muss auf rechts bzw. links eingestellt werden, damit die Inbusschraube ① zur Einstellung der Bremswirkung erreichbar ist.


Montage Holz:

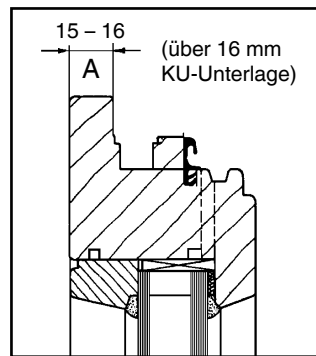

Wenn das **Maß A** (Überschlagshöhe) größer ist als 16 mm, muss die mitgelieferte KU-Unterlage ② unter den Verschlusshaken montiert werden.

Über 18 mm muss eine zweite Unterlage bestellt werden. (Best.-Nr. 42499)

Montage Kunststoff:

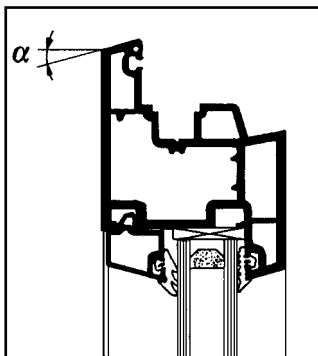

Für abgeschrägte Überschlänge (α) gibt es dazupassende KU-Unterlagen.

5° Schräge

Best.-Nr. 42502 braun


Best.-Nr. 42509 weiß

15° Schräge

Best.-Nr. 42513 braun

Best.-Nr. 42514 weiß

Montage mit Bohrlehre

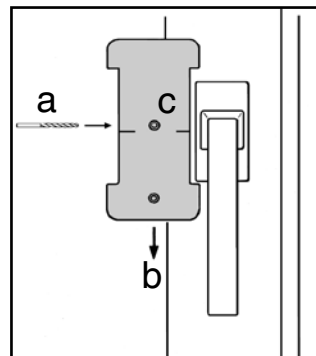

- Mit 3 mm Bohrer im Überschlag vorbohren.
- Lehre nach unten verschieben, bis die Zentrierstifte eingreifen.
- Fenster schließen und Löcher für Verschlusshaken vorbohren.


Best.-Nr. 42505

MACO
MULTI



ATTENTION! When supplied singly ensure that a copy of this note is included within the package. Additional copies of this sheet can be ordered from enquiry@macouk.net

MULTI Vent tilt restrictor

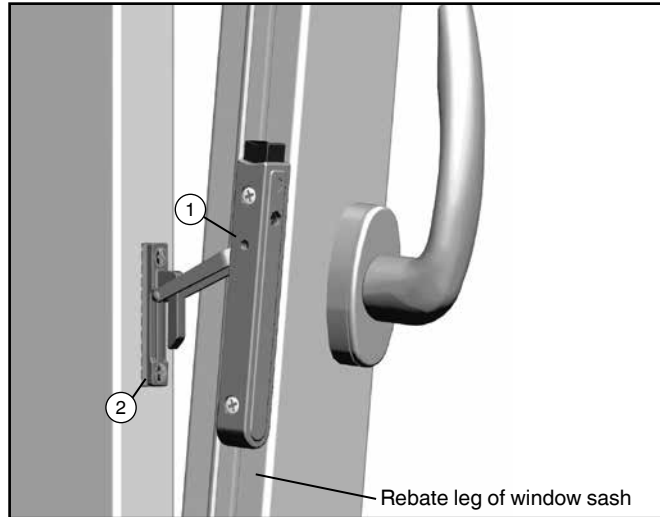


Order No.: 12361 brown
Order No.: 12360 white




This cannot be used as a child safety lock.

Installation

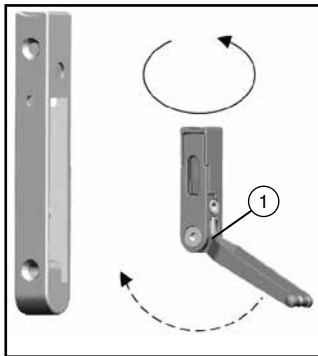

The MULTI Vent must be set to right or left so that Allen screw ① can be accessed to set the braking effect.


Timber installation:

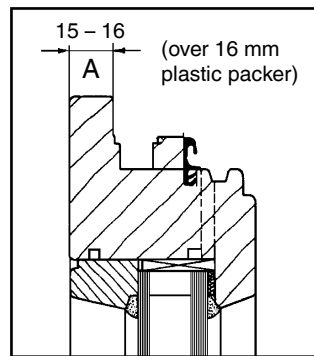

If **dimension A** (rebate height) is greater than 16 mm, the PVC packer supplied ② must be installed below the locking hook.

A second packer must be ordered over 18 mm. (Order No. 42499)

Installation on PVC:

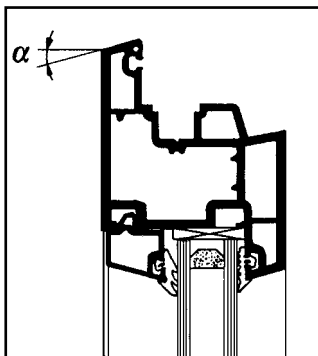

Matching PVC packers are available for pitched rebate legs (α).

5° pitch

Order No. 42502 brown


Order No. 42509 white

15° pitch

Order No. 42513 brown

Order No. 42514 white

Installation with drilling jig

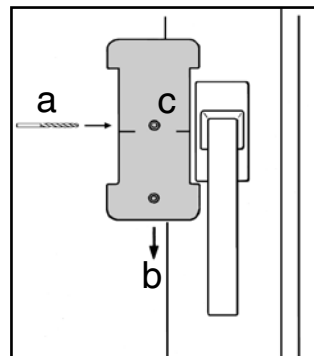

- Pre-drill the rebate leg with 3 mm drill.
- Move the jig down until the centering pins engage.
- Close the window and pre-drill the holes for the locking hooks.

Order No. 42505