



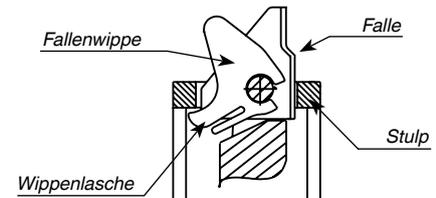

ACHTUNG! Bei Einzelentnahme muss der Beipackzettel dem Einzelteil hinzugefügt werden.
Bei Bedarf können Sie den Beipackzettel von der MACO-Homepage (www.maco.at) herunterladen!

Abgesetzte Kurbelfalle Fallentausch / Fallenumstellung

- ① Schraube vollständig lösen und mit Schraubendreher nach vorne drücken.
- ② Falle herausnehmen.
- ③ Abgesetzte Falle am Stulp so aufsetzen (a), dass die Wippenlasche der Fallenwippe unter die Stulpausnehmung gedrückt werden kann (b).
Bitte rechts/links beachten!
Erst dann die Falle ganz eindrücken.
- ④ Abgesetzte Falle komplett eindrücken und Schraube eindrehen (Drehmoment mind. 1,5 Nm bis max. 2 Nm).
Funktionskontrolle durchführen!

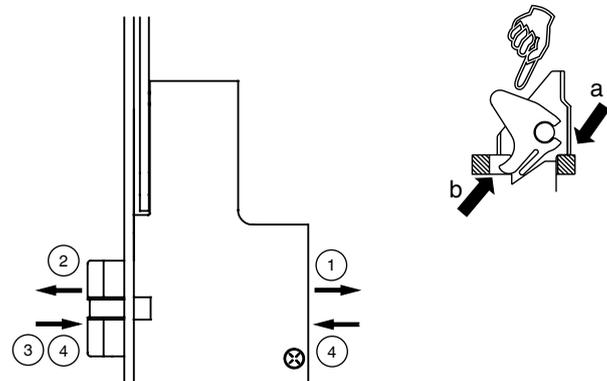



ATTENTION! When supplied singly ensure that a copy of this note is included within the package. Additional copies of this sheet can be ordered from enquiry@macouk.net

Offset latch Latch exchange / Latch Reversal

- ① Fully loosen the screw and press forward by using a screw driver.
- ② Remove the latch.
- ③ Place the offset latch on the faceplate (a) so that the insert leg of the latch insert can be pushed under the faceplate recess (b). Pay attention to the direction right or left! Only then push the latch entirely.
- ④ Completely push the offset latch and tighten the screw (torque min. 1.5 Nm to 2 Nm max.). Perform a functional check!

